




hush.

Install Guide
Timbre

Quiet by design


- Prior to installation, installers are advised to unpack and lay out panels to determine the most aesthetically pleasing arrangement of panels.

1. Identify the back of the Timbre panel. Working quickly, use a back and forth pattern to apply an even bead of adhesive to the back of the panel as shown below.

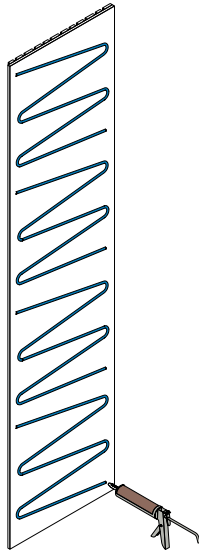


2. Your Timbre panel is now ready to be installed on the wall in the desired location.

(Please note that the Timbre panel should be mounted on the wall within 60 seconds of applying adhesive).

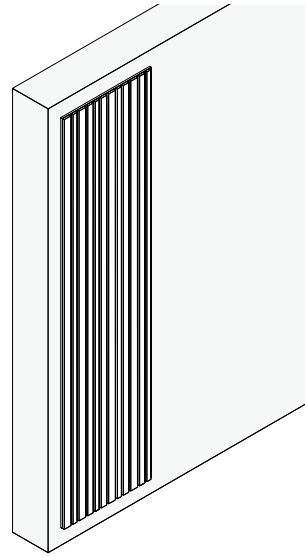


3. With the Timbre panel now located on the wall, apply firm pressure evenly over the entire surface of the Timbre panel. Now, using a countersunk screw suitable for your wall material, place a screw into the felt portion of both upper corners of the panel shown below. Tighten the screw until the head of the screw is flush with the surface of the felt. Repeat this process for both corners at the base of the panel. Your Timbre Panel is now fully installed.

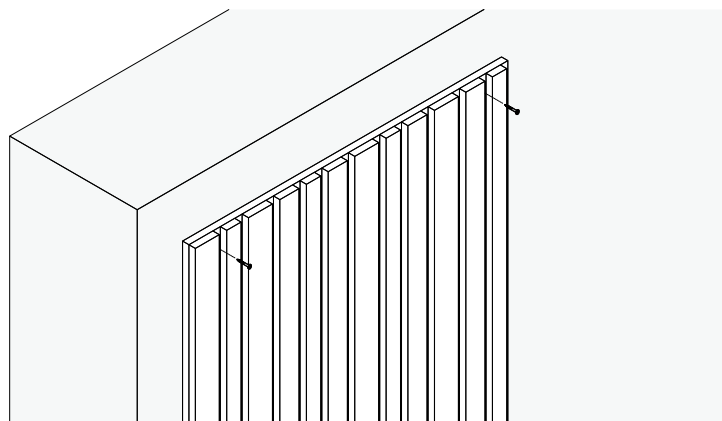


4. In the event that you need to make cuts to your Timbre panel, begin by placing removable tape over the intended cut line.

Important note: Confirm that the direction of blade rotation is correct for ensuring a clean cut on the laminate surface of the Timbre slats. You may need to mark and cut on the back of the panel to accommodate the direction of blade rotation.

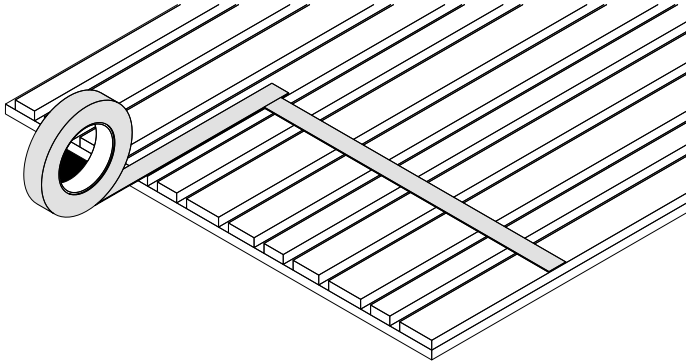


5. Now, using a pencil, mark your cut line on the tape.

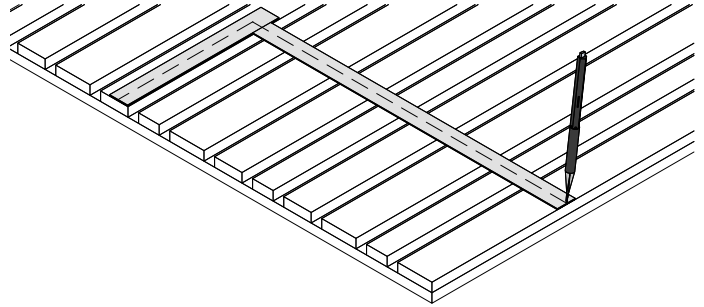


6. Now cut the panel along the marked line using a sharp saw blade.

Confirm that the direction of blade rotation is correct for ensuring a clean cut on the laminate surface of the Timbre slats.

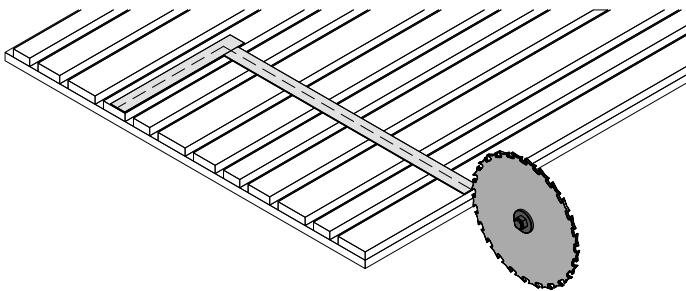


7. Remove the excess removable tape from your Timbre panel. If the cut edges of the slats are sharp, lightly sand the top edge using a medium-fine sand paper.

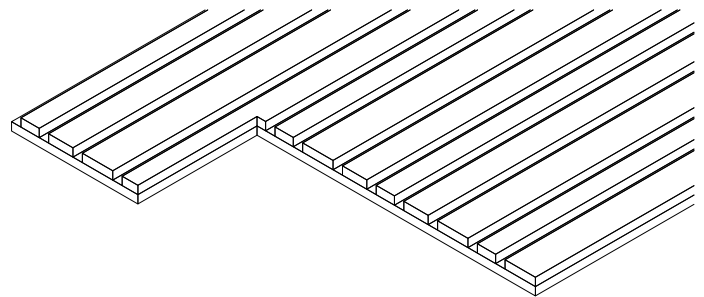


8. On the back of the Timbre panel, working quickly, use a back and forth pattern to apply an even bead of adhesive to the back of the panel as shown below. Your Timbre panel is now ready to be installed on the wall in the desired location.

Please note that the Timbre panel should be mounted on the wall within 60 seconds of applying the adhesive.

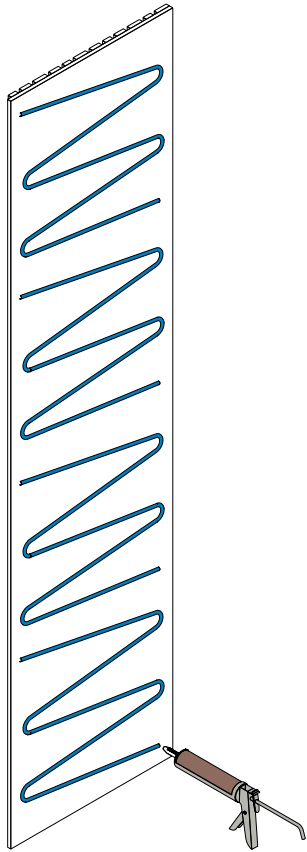

9. When placing Timbre panels beside each other, be sure to install them with the overhanging felt portion always butted up against a non-overhanging felt edge, this will ensure the correct spacing continues throughout the install for a seamless appearance.

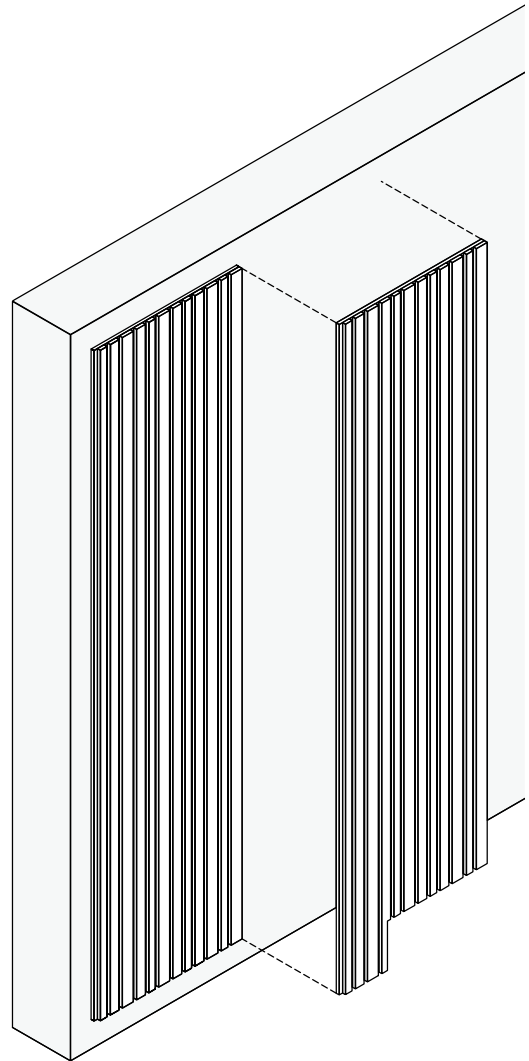

- 10.** With the Timbre panel now located on the wall, apply firm pressure evenly over the entire surface of the Timbre panel. Now, using a countersunk screw suitable for your wall material, place a screw into the felt portion of both upper corners of the panel as show below. Tighten the screw until the head of the screw is flush with the surface of the felt. Repeat this process of both corners at the base of the panel. Your Timbre panel is now fully installed.

