



# **hush.**


Install Guide

## Evoked Valley


*Quiet by design*

- Prior to installation, installers are advised to unpack and lay out panels to determine the most aesthetically pleasing arrangement of panels.


**1. Locate the Evoke Valley.**

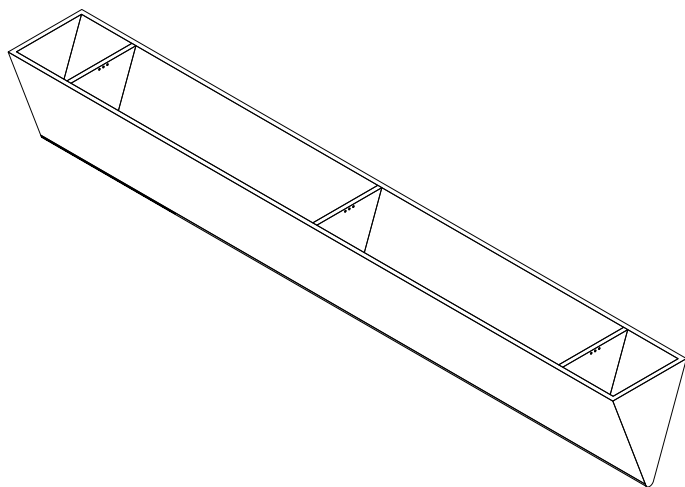


**2. Locate the Shoulder-bracket provided.**

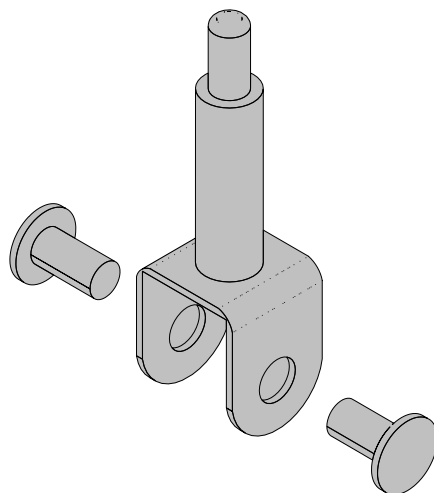

**3. Align the Shoulder-bracket with one of the small cut out holes on each brace, using either the left or the right hole.**

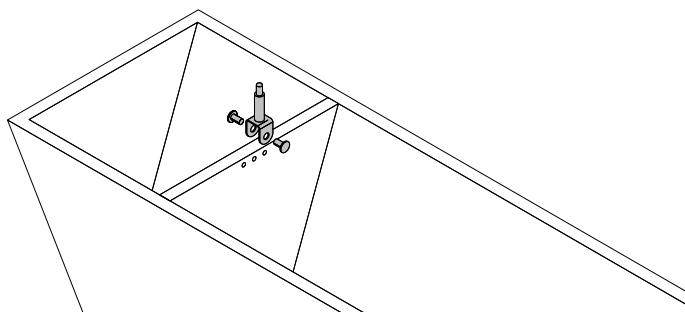

**4. Now tighten the bolt portion of the Shoulder-bracket hardware.**

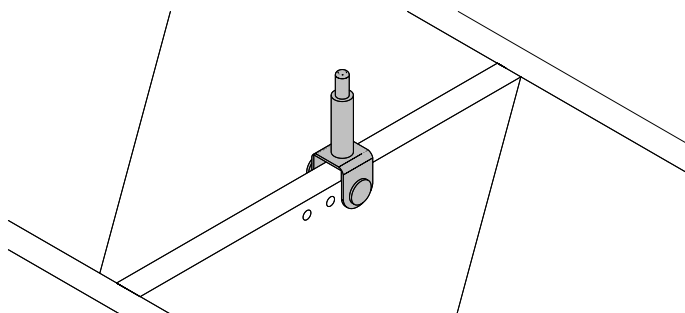

5. Now install the remaining Shoulder-brackets (one per brace). Be sure to alternate your fixing location to the opposite side for each brace down the length of the Valley as shown in the image below, this will enable the product to be leveled after final installation.

When all Shoulder-brackets have been installed and tightened, your Evoke Valley is now complete and ready to be suspended from the ceiling.

*(Please refer to the 'Ceiling Hardware Install Guide' for the final steps).*

